

# Renewal Parts Catalog

## 313NP Network Protector



ELECTRONIC TECHNOLOGY INCORPORATED  
511 LYONS AVENUE, IRVINGTON, NJ 07111  
PHONE 973-371-5160 FAX 973-371-1929  
E-MAIL [sales@eti-nj.com](mailto:sales@eti-nj.com)  
[www.eti-nj.com](http://www.eti-nj.com)


RICHARDS MFG. CO. SALES INC.  
517 LYONS AVENUE, IRVINGTON, NJ 07111  
PHONE 973-371-1771 FAX 973-371-4304  
E-MAIL [sales@richards-mfg.net](mailto:sales@richards-mfg.net)  
[www.richards-mfg.com](http://www.richards-mfg.com)




# Renewal Parts Catalog

## 313NP Network Protector

CAT 7383-004  
August 1, 2011

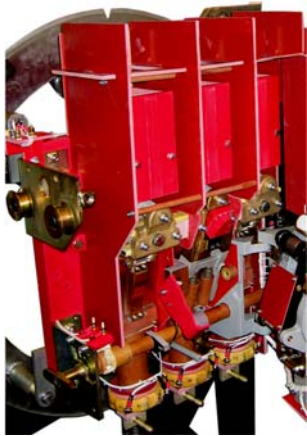

No	ETI Part No.	Description	Cross Ref No.
1	313-5001-00	Backboard, 800-1875Amps	1572032
2	313-5003-00	Backboard, 2500-3500Amps	1514625
3	313-5018-00	Phase Barrier Assembly, 800-1875Amps	1280056G01/02
4	313-5011-00	Phase Barrier Assembly, 2500-3000Amps	1630063
5	313-5008-00	Phase Barrier Assembly, 3500Amps	06B9973H63
6	313-5007-00	Cross Bar Barrier Plate Assembly, 800-1875Amps	
7	313-5031-10	Cross Bar Barrier Plate Assembly, 2500-3000Amps	
8	313-5018-06	Barrier Separator, 800-1875Amps	
	313-5018-17	Barrier Separator, 2000-2250Amps	
9	313-5011-04	Barrier Separator, 2000-3500Amps	
10	313-5022-00	Rear Barrier Plate, 800-1875Amps	
11	313-5011-10	Rear Barrier Plate, 2500-3000Amps	05B92302K14
12	313-5008-06	Rear Barrier Plate, 3500Amps	06B9973H03

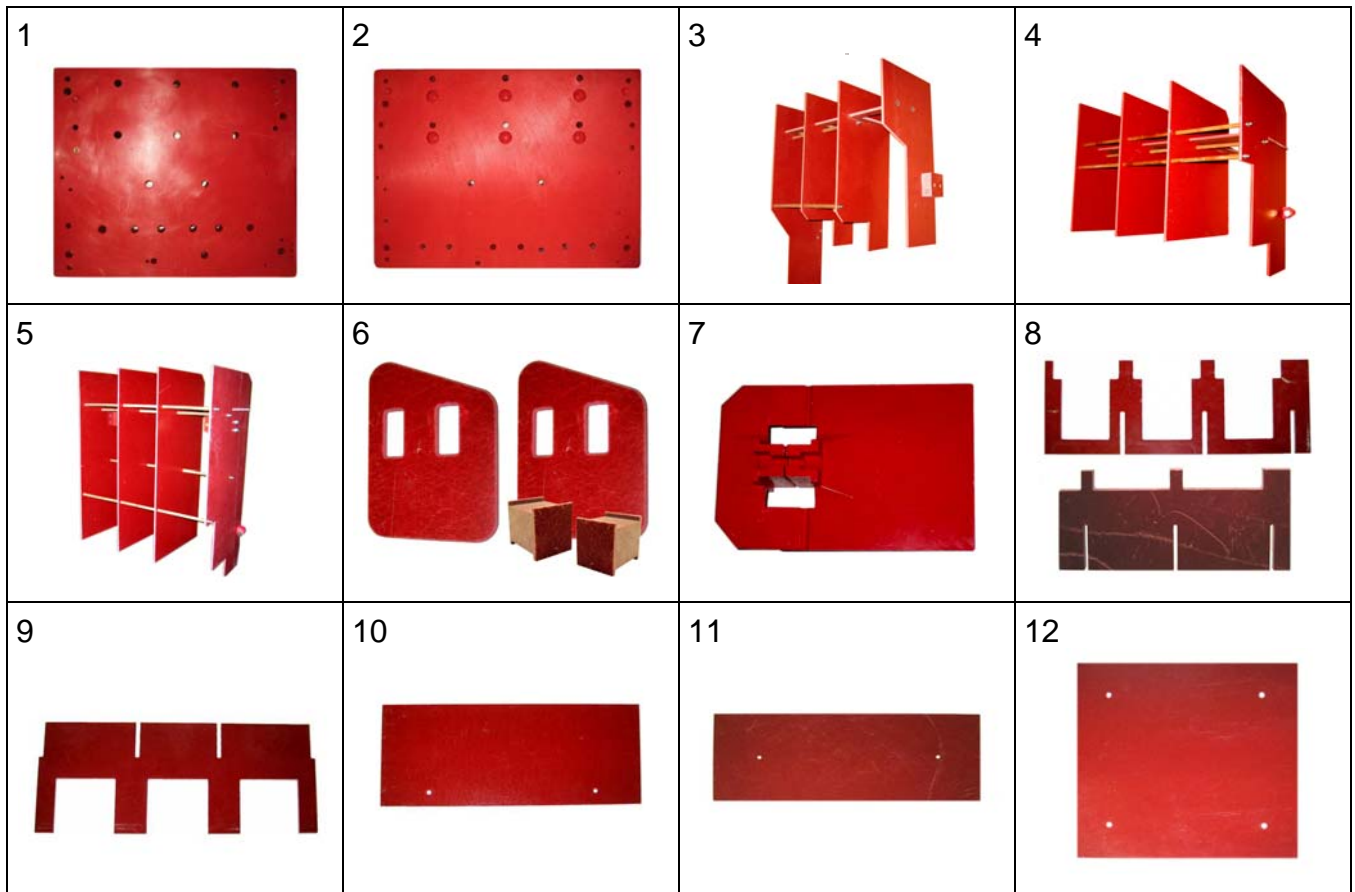

CAT 7383-004  
August 1, 2011



No	ETI Part No.	Description	Cross Ref No.
1	313-3040-00	Terminal Block Assembly (5 Point)	805430
2	313-3039-00	Terminal Block Assembly (8 Point)	805431
3	313-0021-10	Bracket Assembly Right Side, 800-1875Amps	
	313-0021-20	Bracket Assembly Left Side, 800-1875Amps	
4	313-0016-10	Bracket Assembly Right Side, 2500-3500Amps	
	313-0016-20	Bracket Assembly Left Side, 2500-3500Amps	
5	313-0016-27	Bracket Assembly Mounting Wheel Kit	
6	313-0021-50	Stop Pin and Nut Assembly, 800-1875Amps	998070
7	313-0016-50	Stop Pin and Nut Assembly, 2500-3500Amps	1630076
8	313-0061-00	Air Bumper Assembly	122D06060
9	313-0021-01	Ground Block	501A046H0
	313-0021-02	Bolt, Reduced Body Diameter (2 3/4")	
10	313-0022-00	Fuse Swivel Nuts	1087024
11	313-3052-01	Insulated Cross Bar, 800-1875Amps	204B02660
12	313-3050-01	Insulated Cross Bar, 2500-3500Amps	203B43660







# Renewal Parts Catalog

## 313NP Network Protector

CAT 7383-004  
August 1, 2011

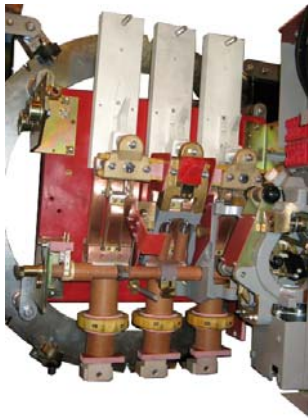

No	ETI Part No.	Description	Cross Ref No.
1	313-0026-10	Stationary Bus, Center, 800-1875Amps	310C352G01
2	313-0026-20	Stationary Bus, Left and Right, 800-1875Amps	310C352G02
3	313-0026-04	Stationary Arcing Contact Assembly, 800-1875Amps	1529542
4	313-0026-05	3" Threaded Pin	
5	313-0027-30	Movable Bus - Center, 800-1875Amps	310C353G02
6	313-0027-20	Movable Bus - Left and Right, 800-1875Amps	310C353G01
7	313-0027-13	Movable Arcing Contact Shunt, 800-1875Amps	1404544
8	313-0027-11	Inner Clamp, Cross Bar, 800-1875Amps	
9	313-0027-12	Outer Clamp, Cross Bar, 800-1875Amps	
10	313-0027-16	Outer Clamp, Cross Bar, 800-1875Amps	1292080
11	313-0027-14	Movable Arcing Contact, 800-1875Amps	1572031
12	313-3028-00	Spring Kit, 800-1875Amps	

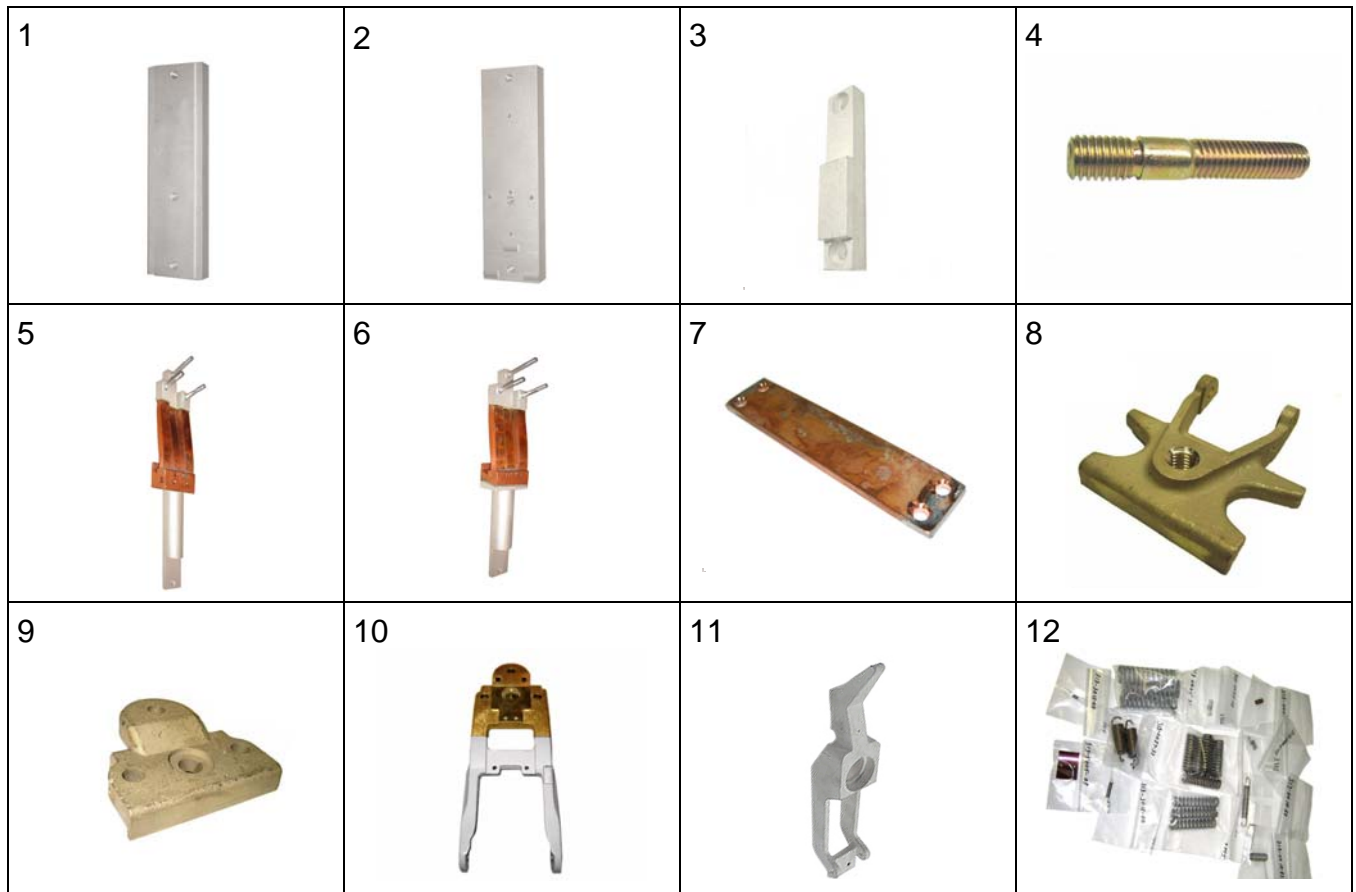



# Renewal Parts Catalog

## 313NP Network Protector

CAT 7383-004  
August 1, 2011



No.	ETI Part No.	Description	Cross Ref No.
1	313-0030-01	Stationary Bus Bar, 2500-3000Amps	310C358G02
2	313-0030-02	Stationary Bus Bar, 3500Amps	310C358G01
3	313-0030-09	Bus Stud Block	
4	313-0030-20	Middle Contact Assembly with Arcing Contact	
5	313-0030-06	Stationary Arcing Contact, 2500-3500Amps	
6	313-0030-07	Arcing Contact Shunt, 2500A-3500Amps	
7	313-0029-08	Upper Blade Support, 2000A-3500Amps	
8	313-0029-19	Blade Support Base, 2500A-3500Amps	
9	313-0029-02	Inner Left Contact Blade, 2500-3500Amps	
10	313-0029-03	Inner Right Contact Blade, 2500-3500Amps	
11	313-0029-04	Outer Left Contact Blade, 2500-3500Amps	
12	313-0029-05	Outer Right Contact Blade, 2500-3500Amps	







# Renewal Parts Catalog

## 313NP Network Protector


CAT 7383-004  
August 1, 2011

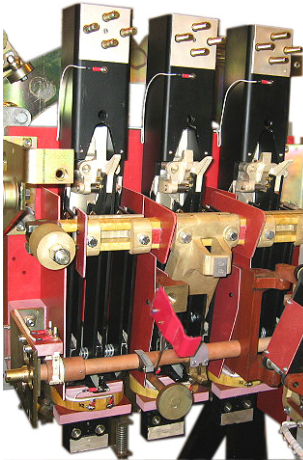


No	ETI Part No.	Description	Cross Ref No.
1	313-0029-00	Moving Bus Bar Assembly, 2500-3500Amps	436D166G01
2	313-3030-00	Movable Arcing Contact Assembly, 2000-3500Amps	1514623
3	313-0029-16	Slotted Belleville Disk Spring (Small ID)	
4	313-0029-17	Slotted Belleville Disk Spring (Large ID)	
5	313-0029-15	Belleville Disk Spring	
6		Contact Blade Hardware Kit	
7	313-3029-00	Spring Kit, 2250-3500Amps	
8	313-5005-00	Arc Chute Assembly	17B9967G01
9	313-0028-00	Permit Access Flag Assembly	501B792G01
10	313-0029-10	Center Clamp, 2500-3500Amps	1400997

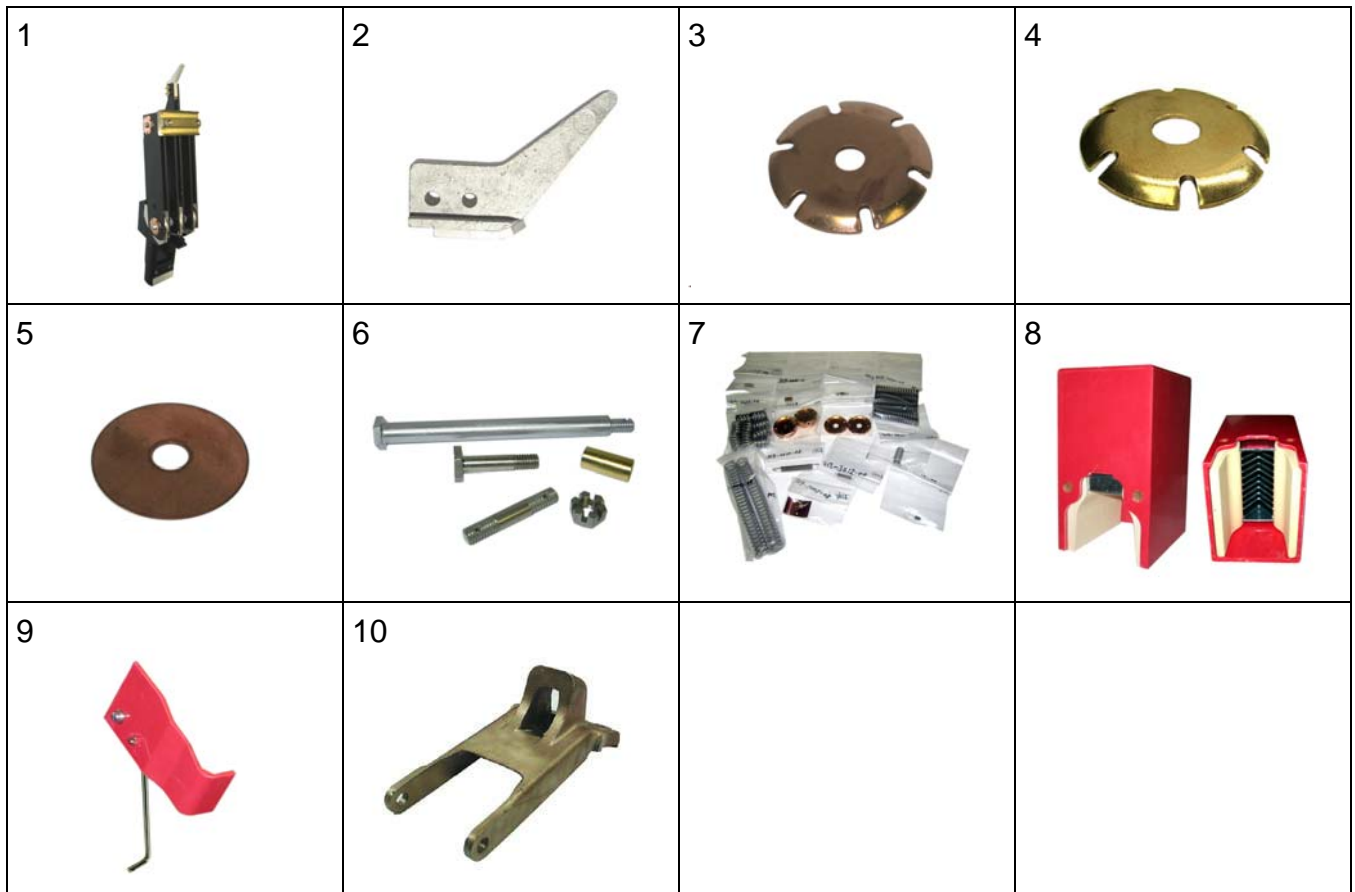

CAT 7383-004  
August 1, 2011

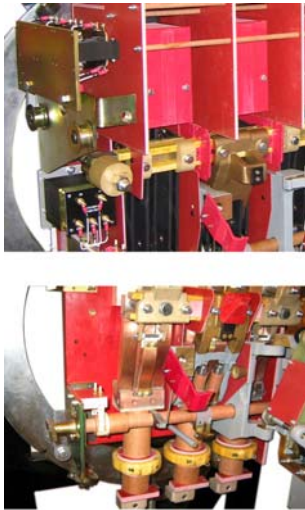

No	ETI Part No.	Description	Cross Ref No.
1	313-0053-10	Molded Current Transformer, 2500:5	
2	313-0054-10	Molded Current Transformer, 3000:5	592C557G01
3	313-0056-00	Current Transformer, 1200/1600:5	2713C37G01
4	313-0058-10	Molded Current Transformer 1200:5	1019562
5	313-0059-10	Molded Current Transformer 1600:5	592C554G01
6	313-0062-10	Molded Current Transformer 1600/1200/800:5	745C148G01
7	313-0067-10	Molded Current Transformer 2500/3000:5	
8	313-5032-01	Current Transformer Spacer, 800-1875Amps	334916
	313-5006-00	Current Transformer Spacer, 2500-3500Amps	498A555H01
9	313-3002-00	Current Transformer Retainer Block, 800-1875Amps	1037971
	313-3003-00	Current Transformer Retainer Block, 2500-3500Amps	1630050
10	313-0057-00	Control Transformer (Auto Type)	3338A91401
11	313-0051-10	Molded Control Transformer, 2 Winding, 480Volt	7526A13G01
12	313-0052-10	Molded Potential Transformer, 277Volt	7526A14G01

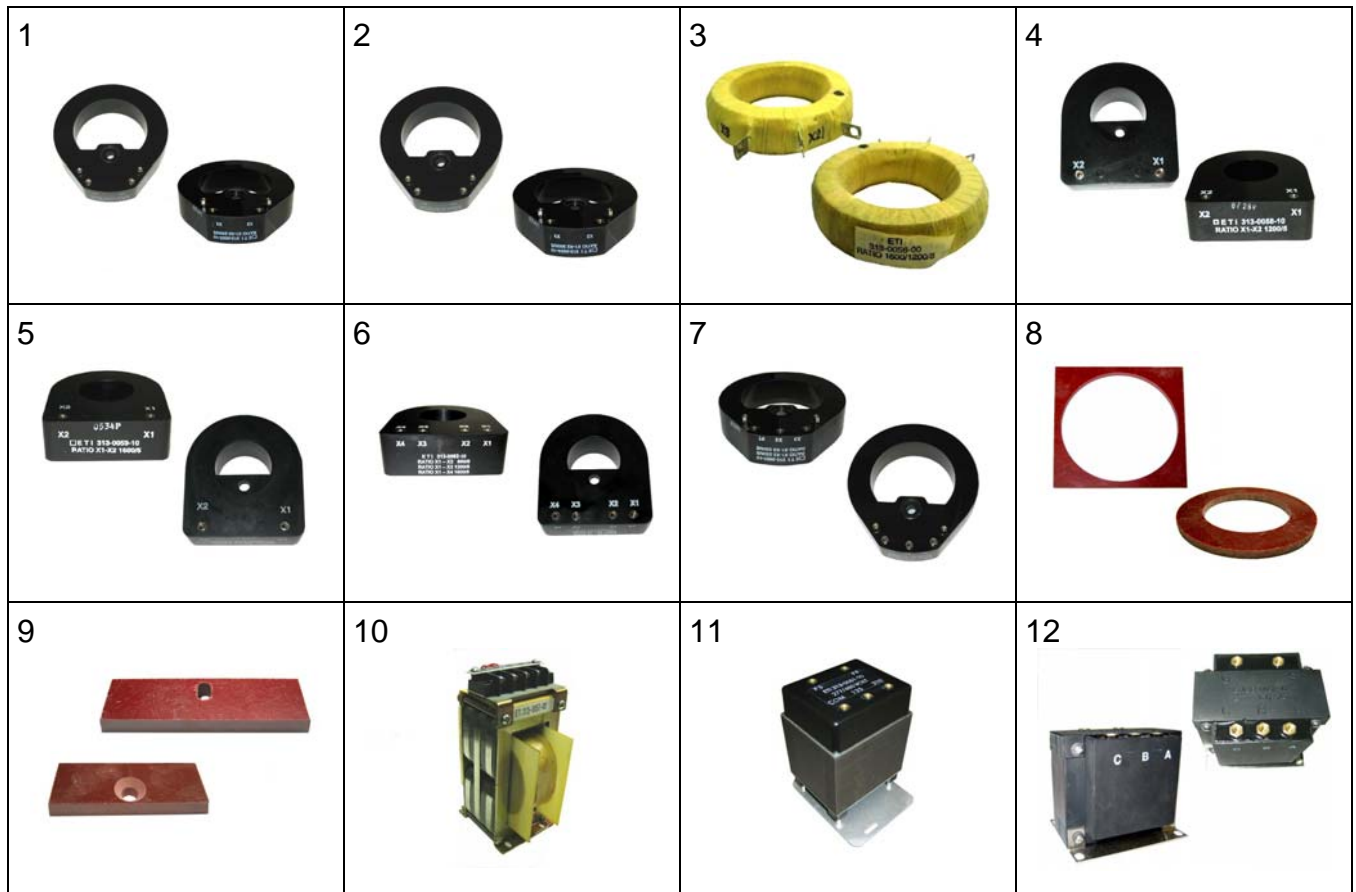




# Renewal Parts Catalog

## 313NP Network Protector

CAT 7383-004  
August 1, 2011




No	ETI Part No.	Description	Cross Ref No.
1	313-0003-10	Front Door Assembly	
2	313-0014-50	Unwired Front Panel	438D74860
3	313-0015-00	Semaphore Assembly	782A747H01
4	313-3017-00	Operation Counter	592C040H03
	313-3013-00	Operation Counter Spring	503B73H01
5	313-0009-50	Auxiliary Switch, 8Pole, 125/216Volt	310C626G01
6	313-0009-60	Auxiliary Switch, 12Pole, 277/460Volt	310C626G02
7	313-0020-03	Relay Terminal Block, 9 Point	310C356G03
8	313-0020-04	Relay Terminal Block, 6 Point	310C356G01
9	313-0102-00	3 Ohm Double Resistor, Adjustable and Fixed	664A956G01
10	313-0103-00	3 Ohm Single Resistor, Fixed	664A956G02
11	313-0103-50	3 Ohm Single Resistor, Adjustable	
12	313-0101-00	Individual Resistor, 1900/1200 Ohm	499A067H04

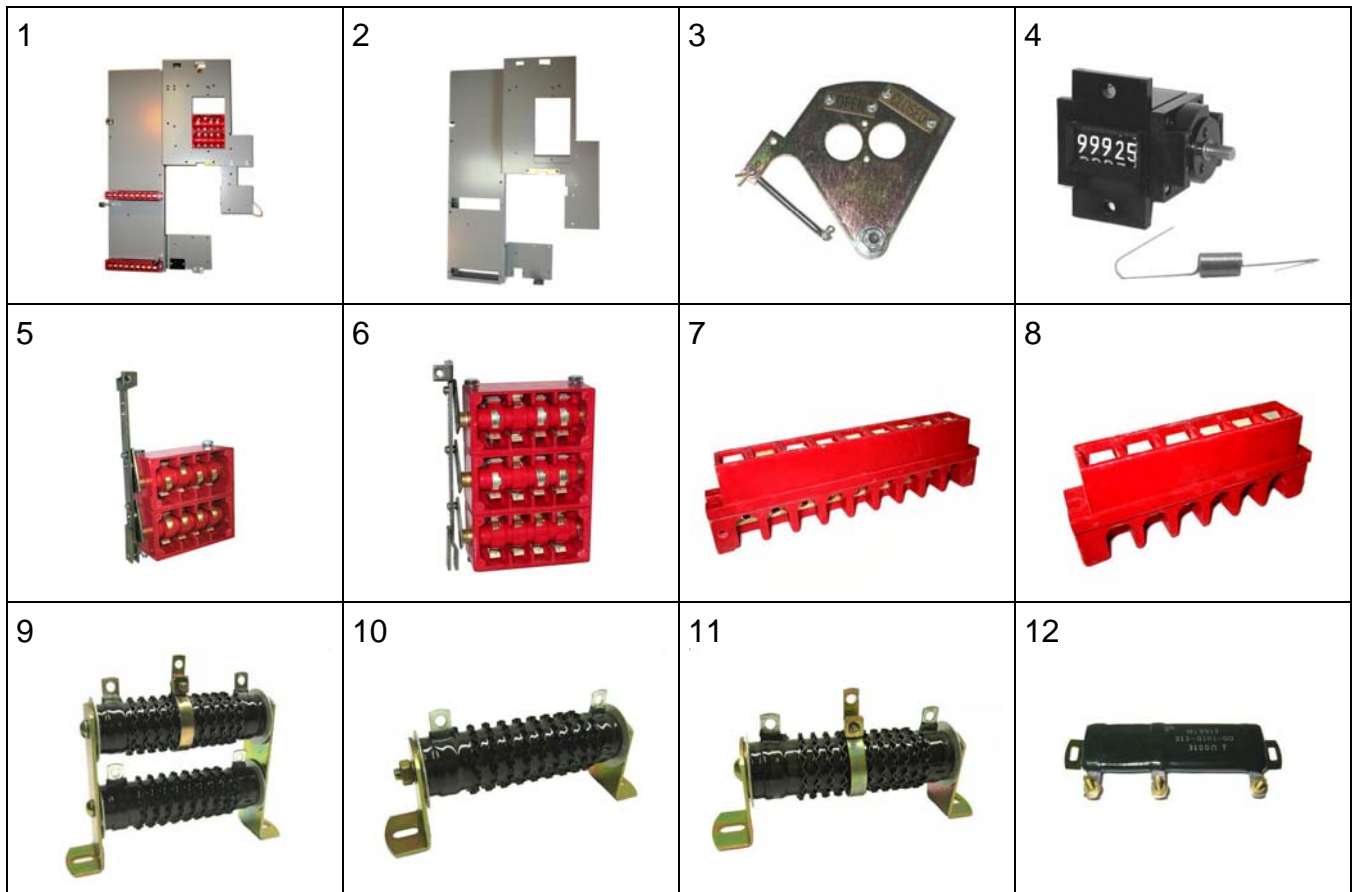


CAT 7383-004  
August 1, 2011



No	ETI Part	Description	Cross Ref No.
1	313-5010-00	Resistors Mounting Panels Only	3471A47H01/02
2	313-0007-00	Motor Relay Assembly	503B286G03
3	313-0007-10	Motor Relay Assembly (Forward Facing Brkt.)	
4	313-0050-00	Phantom Load Assembly	301C437G02
5	313-3038-10	BN Jumper Plate Assembly (New Style)	
6	313-0023-00	Relay Swivel Nut	5765A44G01
7	313-0025-00	Terminal Block with Cover	
8	313-1008-00	2Wire Motor	592C071G02
9	313-1007-00	3Wire Motor, (Beau Plug)	
10	313-1007-50	3Wire Motor, (Polarized Circular Amp Connector)	592C071G03
11	313-1007-70	3Wire Motor, (Brown-Orange Amp	
12	313-1007-80	3Wire Motor, (Individual Connector) Leads	592C071G01

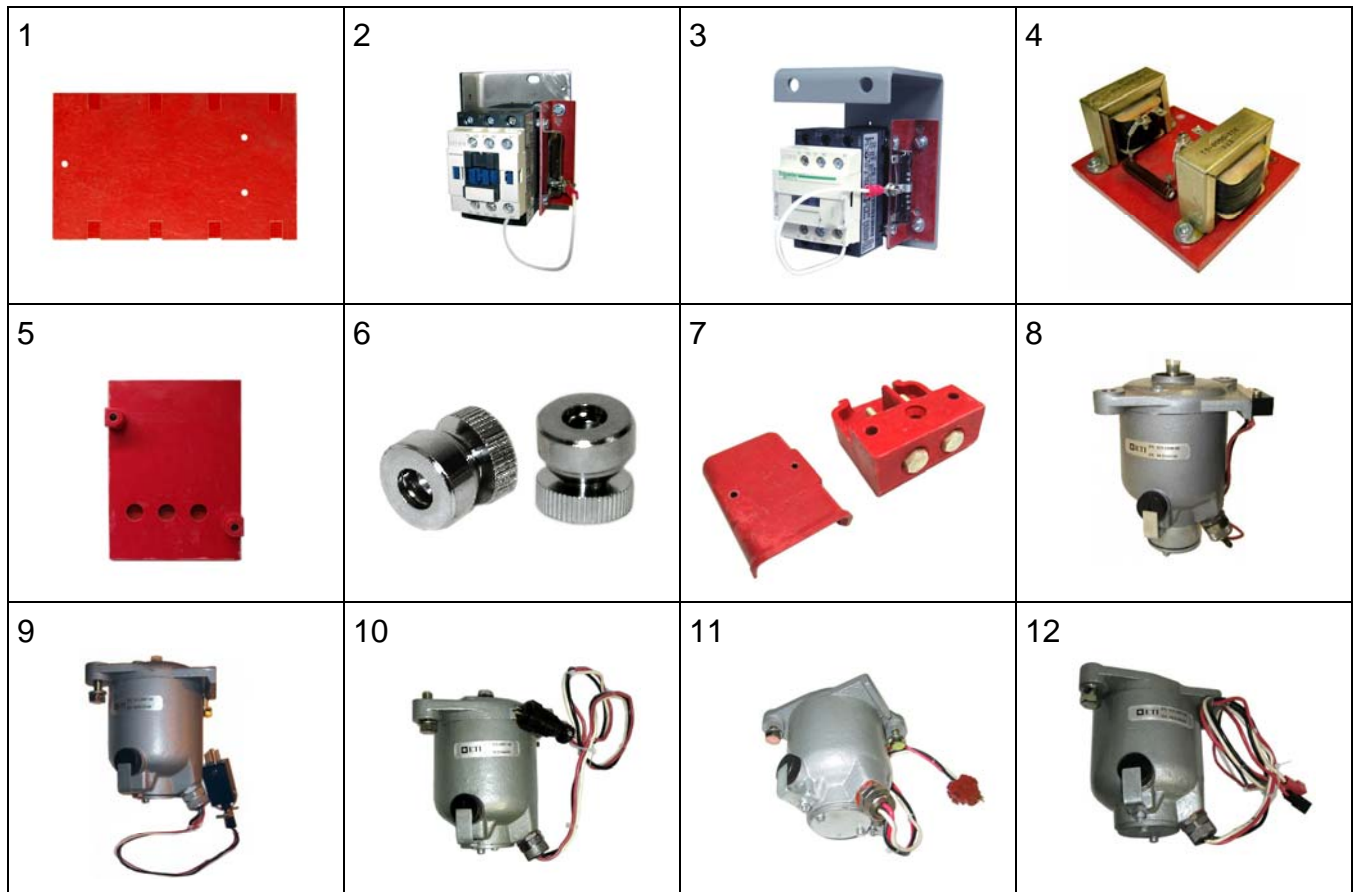

CAT 7383-004  
August 1, 2011

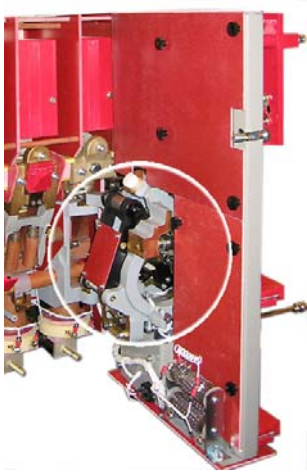

No.	ETI Part No.	Description	Cross Ref No.
1	313-0010-00	Operating Mechanism Assembly	546F561G01
2	313-0010-69	Gear Box Cover	
	313-0010-31	Gear Box Gasket	
3	313-0010-33	Worm Gear	1247398
4	313-0010-50	Worm Shaft Assembly	33C0682G02
5	313-0010-77	Toggle Assembly	436D164G02
6	313-0010-78	Main Latch Assembly	310C354G01
7	313-0010-79	Bell Crank and Link Assembly	501A011G01
8	313-3012-00	Toggle Reset Spring	998414
9	313-0001-40	Shunt Trip Assembly with Molded Coil	1114739
10	313-0001-19	Shunt Trip Molded Coil	918738
11	313-0006-00	Motor Cut Off Switch	310C629G01
12	313-0010-07	Operating Mechanism Stop Bumper	555660
	313-0010-73	Woodruff Key	





# Renewal Parts Catalog

## 313NP Network Protector

CAT 7383-004  
August 1, 2011




No	ETI Part No.	Description	Cross Ref No.
1	313-0010-90	Mechanism Support Bracket, 800-1875Amps	438D751601
2	313-5033-00	Mechanism Support Shield Kit, 800-1875Amps	
3	313-0010-80	Mechanism Support Bracket, 2500-3500Amps	438D752601
4	313-5037-00	Mechanism Support Shield Kit, 2500-3500Amps	
5	313-0010-08	Retaining Bushing	
6	313-0011-50	Operating Shaft Assembly, 800-1875Amps	1572035
7	313-0011-00	Operating Shaft Assembly, 2500-3500Amps	1630002
8	313-0011-06	Shaft Key	
9	313-0005-00	Shaft Switch Assembly	1572037
10	313-0011-20	Shaft Drum Contact	657A239H01
11	313-0021-30	Shaft Support Bracket, 800-1875Amps	435D497601
	313-0021-02	Captive Bolt, 2-3/4"Long, 800-1875Amps	
12	313-0016-30	Shaft Support Bracket, 2500-3500Amps	435D497602
	313-0016-06	Captive Bolt, 3-1/2"Long, 2500-3500Amps	



CAT 7383-004  
August 1, 2011





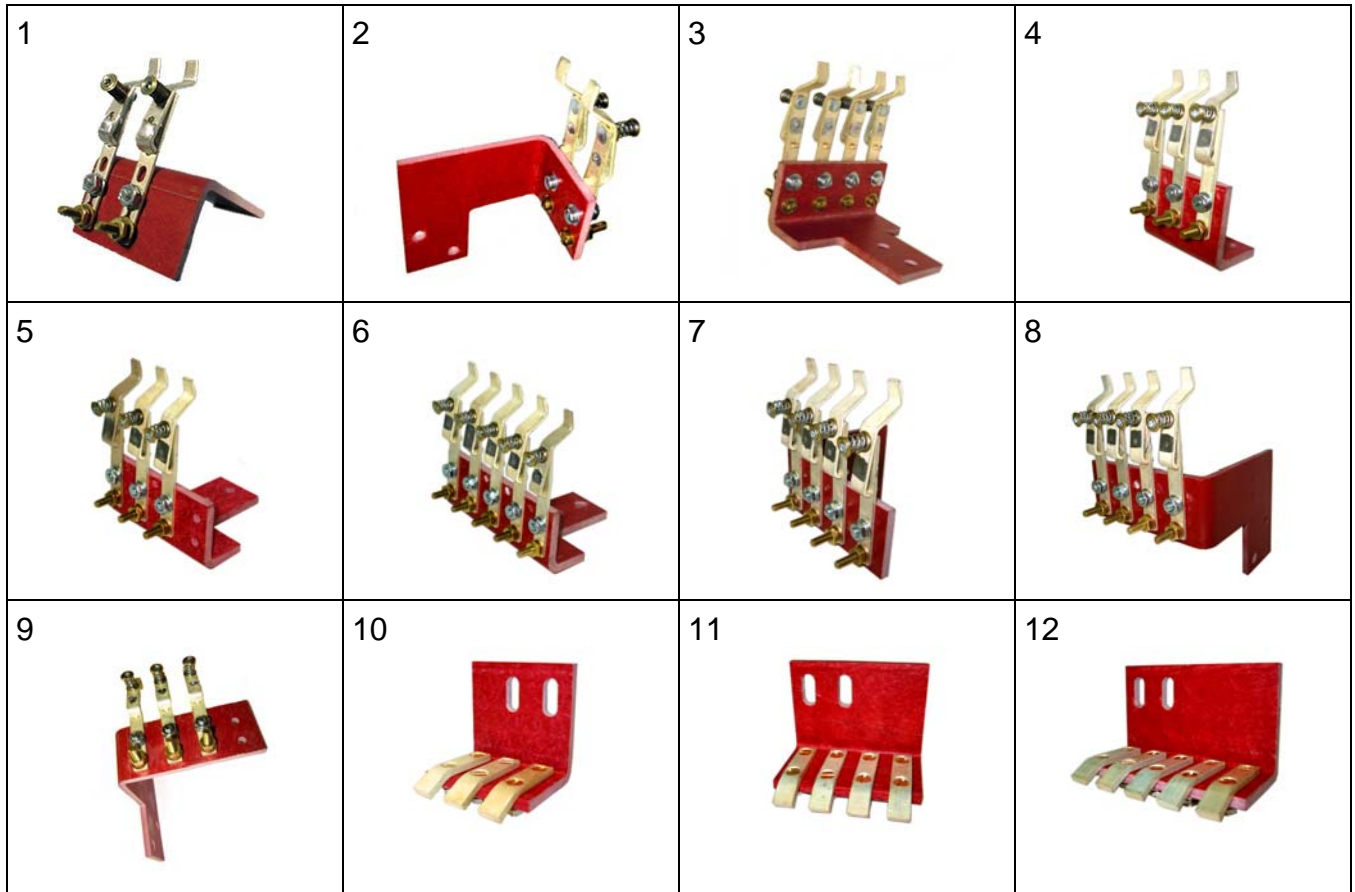



No	ETI Part No.	Description	Cross Ref No.
1	313-0008-00	Movable Disconnect, 2 Point	12B6002G01
2	313-0008-10	Movable Disconnect, 2 Point, HV	
3	313-0008-20	Movable Disconnect, 4 Point	
4	313-0008-30	Movable Disconnect, 3 Point	
5	313-0008-35	Movable Disconnect, 3 Point	
6	313-0008-40	Movable Disconnect, 5 Point	
7	313-0008-60	Movable Disconnect, 4 Point, HV, Left Side	
8	313-0008-70	Movable Disconnect, 4 Point, HV, Right Side	
9	313-0008-80	Movable Disconnect, 3 Point, HV, Left Side	
10	313-5034-30	Stationary Disconnect, 3 Point	
11	313-5034-40	Stationary Disconnect, 4 Point	
12	313-5034-50	Stationary Disconnect, 5 Point	



CAT 7383-004  
August 1, 2011



No.	ETI Part No.	Description	Cross Ref No.
1	215-0001-00	Network Protector Work Stand, Small	
2	215-0001-06	Work Stand Adapter, 800-1875Amps	
3	215-0001-07	Work Stand Adapter, Upper L/R Side, 800-1875Amps	
4	215-0001-03	Work Stand Adapter, 2500-3500Amps	
5	215-0001-22	Work Stand Adapter, Spacer	
6		Work Stand Adapter Hardware	

1		2		3		4	
5		6					

Electronic Technology Incorporated  
Richards Manufacturing Company, Sales Inc.

Electronic Technology Incorporated And Richards Manufacturing are not  
connected to or affiliated with Westinghouse or Cutler Hammer.  
This parts book supersedes any and all other previous books. ETI is not responsible for typographical errors.